
FOR A GOOD REASON GRUNDIG

EFFICIENT MANICURE & PEDICURE SET

MA 5820

de en fr it pt

es pl cs tr el

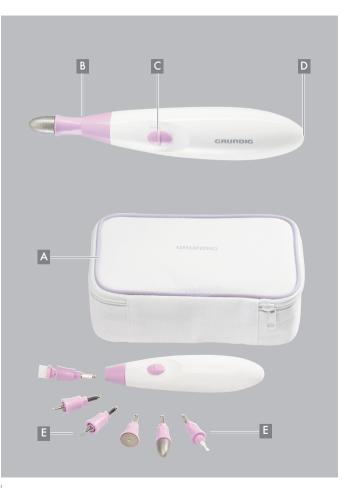

DEUTSCH	4-14
ENGLISH	15-23
FRANÇAIS	24-32
ITALIANO	33-41
PORTUGUÊS	42-50
ESPAÑOL	51-59
POLSKI	60-68
ČESKY	69-77
TÜRKÇE	78-86
ΕΛΛΗΝΙΚΑ	87-95

Please note the following instructions when using the device:

- This device is designed for domestic use only.
- This device is designed for the treatment of human finger nails and toe nails, hardened skin and corns. Any other use is expressly prohibited.
- When using the device in a bathroom, it should on no account come into contact with water or any other liquid.



- Always unplug the device prior to fitting attachments, cleaning and after use.
- Caution! Always keep the power adapter dry.
- Never carry the device unit by the power cord.
- Do not clamp or pull the power cord over sharp edges.
- Do not use the device if the unit, attachments or power cord is visibly damaged.

- Keep the device out of direct sunlight, excessive heat and open flames.
- Do not immerse the device in water.
- Do not drop the device.
- Keep the device out of the reach of children.
- If the power cord is damaged, it must be replaced by the manufacturer, its service centre or a similarly qualified person to prevent danger arising.

A responsible approach!



GRUNDIG focuses on contractually agreed social working conditions with fair wages

for both internal employees and suppliers, as well as on the efficient use of raw materials with continual waste reduction of several tonnes of plastic each year – and availability of at least 5 years for all accessories.

For a future worth living. For a good reason. Grundig.

SAFETY

- The device may not be used by the following people, including children: those with limited physical, sensory or mental capabilities and also those with a lack of experience and knowledge. This does not apply to the latter if they were instructed in the use of the device or if they use it under the supervision of a person responsible for safety. Children should always be supervised to ensure that they do not play with the device
- Do not open the device under any circumstances. No warranty claims are accepted for damage caused by improper handling.

OVERVIEW

Dear customer,

Congratulations on your purchase of the MA 5820 Professional Manicure/Pedicure Set for natural and artificial nails.

Please carefully read the following instructions to help you enjoy your quality product from Grundig for many years to come.

Special features

- Two speed settings allow sensitive treatment of every area on finger and toe nails.
- Six different attachments offer diverse applications for the overall care of your natural or artificial nails. The tapered file allows you to treat hardened skin and corns.

Every attachment except the cuticle pusher and polishing brush is made of sapphire.

Contents and operating controls

See the illustrations on page 2.

- Unit storage case, attachments and power adapter.
- B Connector for attachments.
- Slide switch. Switches the unit on and off, switches between two speed settings (»1« and »2«).
- Power cord socket.
- Six different attachments.
- Power adapter (cable length 3 m).

INDIVIDUAL PARTS

The attachments and their functions

Disc File



 The disc file shortens and shapes the nails up to the corners. You can attain flawless nails, which no longer tear, break or splinter.

Tapered file



 The tapered file allows you to treat calluses and hardened skin on feet and hands as well as hardened nails. It restores shape to crooked nails and alleviates painful pressure.

Small tapered file



 The small tapered file removes difficult corners and edges, particularly in places the large tapered file cannot reach. It also allows you to clean the underside of artificial nails. Use the small tapered file with care.


INDIVIDUAL PARTS

Round file



- The round file can be used to treat ingrown nails. Applying it sideways, slowly grind the ingrown nail until it has been freed. Do not use the round file to remove cuticles near the nail moon. There is a risk of cutting grooves into the nail moon!

Cuticle pusher



 Sensitive cuticles should not be cut or abraded. Use the cuticle pusher to loosen and gently push back the cuticle.

Caution

7 Only use the cuticle pusher at speed »1«.

Polishing brush



 The brush serves to polish nail lacquer as well as treat against nail fungus. However, it also cleans and polishes the treated nail and removes loosened cuticles.

POWER SUPPLY

Electrical operation

Operate the device with the enclosed power adapter.

Check that the voltage indicated on the type plate of the adapter corresponds to your local power supply.

The only way to disconnect the device from the power supply is to unplug the power supply unit.

- I Insert the power cord into the socket on the device.
- 2 Plug the power adapter **F** into an electrical outlet.

Caution

Avoid overheating the device through excessive use. Turn the device off after approximately 20 minutes of use and allow to cool for 15 minutes before reusing.

OPERATION

Nail care

- Switch off the device by pushing the slide switch to position »O«.
- 2 Remove any attachments.
- 3 Insert the desired attachment into the socket B until it locks into place.
- 4 Insert the power cord into the socket on the device and plug the power adapter into the electrical outlet.
- 5 Switch on the device by pushing the slide switch c to position »1« or »2«

Caution

- Only use speed »1 « for difficult applications.
- 6 Switch off the device after use by pushing the slide switch c to position »O«.

- **7** Disconnect the power adapter from the electrical outlet.
- 8 Remove the power cord from the socket D on the device.
- 9 Remove and store any attachments.

Note

Before attempting difficult applications, begin with the shortening and shaping of nails. Use the disc file attachment. You can thus prevent painful ingrown nails

CLEANING AND MAINTENANCE

Cleaning the device

Caution

Always disconnect the power adapter and cable from the device before cleaning.

Always clean the unit with a soft, slightly moist cloth and a small amount of detergent. Do not use any chemical cleaning agents.

Cleaning the attachments

Clean the attachments, especially the file attachments, with a brush, for example, an old tooth brush.

Thoroughly remove dust and any skin residue.

Disinfecting the file attachments with a sterilising hand spray or 90% rubbing alcohol is recommended. This prevents the spread of infection

Always keep the prongs on the attachments free of oily substances.

Storage

If you do not wish to use the set for an extended period of time, please store it carefully.

- The device must be completely dry.
- 2 Ensure that the attachments are completely clean.
- 3 Store the unit, attachments and power adapter in the provided storage case in a cool dry place.
- **4** Ensure that the set is kept out of the reach of children.

INFORMATION

Environmental note

This product is manufactured from high-quality parts and materials which can be reused and recycled

Therefore, do not dispose of the product along with normal household waste at the end of its service life. Take it to a collection point for the recycling of electrical and electronic devices. This is indicated by this symbol on the product, in the operating manual and on the packaging.



Please consult your local authority for collection points in your area.

Help protect the environment by recycling used products.

Technical information



This product conforms to the European directives 2004/108/EC, 2006/95/EC and 2009/125/EC.

Power Supply

Power adapter: 100 - 240 V ~, 50/60 Hz 30 V DC 250 mA

Technical and design modifications are reserved.